

ENABLE dependency (EN-dependency)

ENABLE dependency is used to indicate an ENABLE input that does not necessarily affect all outputs of an element. It can also be used if one or more inputs of an element are affected.

See A00284_Illustration_EN

For comparison of C-, EN-, and M-effects on inputs, see A00286.